

TRUCK BOX

6 DRAWER

K7850/K7850W

Operation Manual

Caution: Take Safety Precautions When Using Your Toolbox

Do not open more than one drawer at a time unless mounted

Do not step on drawers

Do not let children near the Toolbox

Do not exceed Drawer Load Limit (45kgs)

Suitable for mounting to vehicles

Ensure box is secured to vehicle

Lock drawers and lid before moving the toolbox or driving the vehicle

IMPORTANT:

THIS OPERATING MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. READ CAREFULLY AND UNDERSTAND ALL INFORMATION BEFORE OPERATING TRUCK BOX. SAVE THIS MANUAL FOR FUTURE USE

EXTREMELY HEAVY

OVERSIZE:

This product requires a mechanical aid to lift

WARNING

Parts List

2 x Keys

7 x EVA Liners

TOOL CHEST SPECIFICATIONS

	Width	Depth	Height
Overall	1000mm	500mm	670mm
Top Area (including lid)	845mm	424mm	118mm
Drawers	685mm	400mm	45mm
Deep Drawer	685mm	400mm	90mm
Weight	93Kg		

MAINTENANCE

- Ensure the box locking latches, handles are securely closed and locked at all times
- Regularly maintain and adjust locking mechanism to ensure they close tightly
- Regularly lubricate and clean hinges and front/rear of locking system with light oil
- Regularly lubricate lock barrels with graphite powder or silicone spray
- Regularly inspect rubber weather seal and repair or replace if worn or broken using quality silicon to attach
- Periodically check for leaks and water entry points and use a quality silicone sealant to rectify leaks (Check locks, latches, hinges, seals, welds, mounting points)
- Use quality silicone sealant on all mounting point fasteners and ideally use a rubber mat between the base of the storage item and vehicle to reduce vibration and product fatigue
- Periodically tighten all hardware.
- Lubricate the slides twice a year.
- Use a damp microfibre cloth to clean all surfaces.

WARNING: Avoid cleaning with hoses & high pressure cleaners as water ingress can occur.

Drawer Removal

1 Removing the Drawers

- Fully extend the empty drawer.
- Push down the right release lever while pushing up the left release lever.
- Pull the drawer outward until it is released from the drawer slide.

1 Pull up the left release lever

1 Push down the right release lever

2 Re-Inserting The Drawers

- Extend the drawer slides.
- Insert the brackets on each side of the drawer into the slots on the slides, being careful that they are properly positioned.
- Once properly inserted, completely close the drawer to set the slides in their proper positions.

TOOLS & ASSISTANCE NEEDED

2 People Lift

Mechanical Assistance

1

TRUCK BOX

 
6 DRAWER

K7850/K7850W

Mounting & Lifting




Permanent

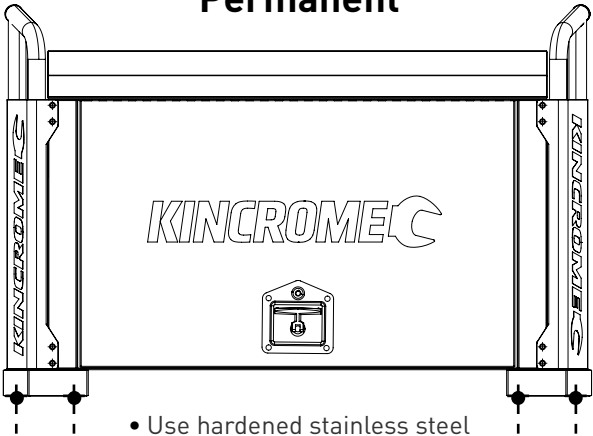


- Use hardened stainless steel bolts & fasteners with appropriate thread locker or locking nuts when mounting to vehicle trays.

 Temporary

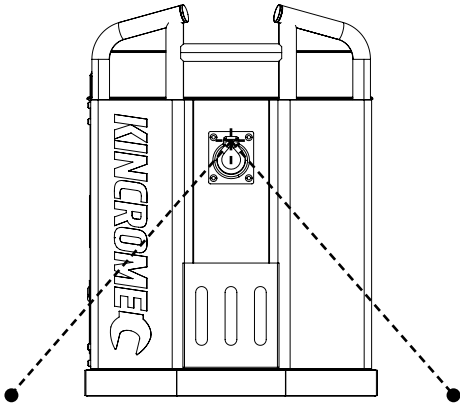

 - Use appropriately rated and approved tie downs to secure the box to the vehicle.

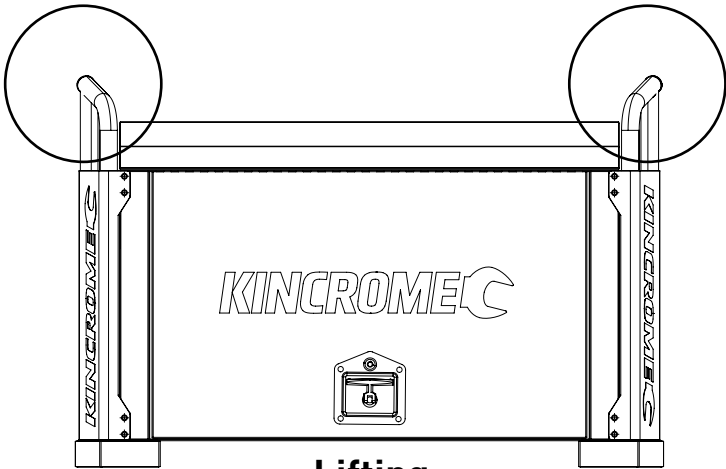

Lifting

 


2 People Lift

Use roll cage carry points to lift.

NOTE: Manual lift only when empty.


Mechanical assistance is recommended.

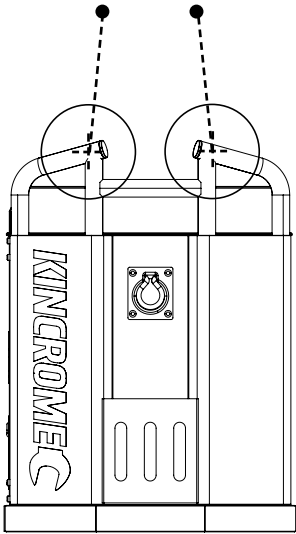

Hoisting

- Use appropriately approved and rated hoist straps and crane, hoist or forklift.

 Specifications

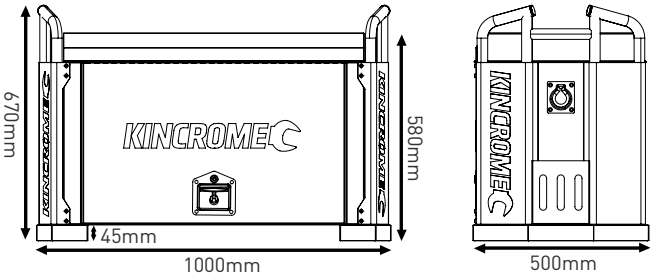

TRUCK BOX

6 DRAWER

K7850/K7850W

Replacement Parts



REPLACEMENT PARTS

ITEM	PART NO.	DESCRIPTION	QUANTITY
1	K7850-1	Lock Barrel & Key	1
2	K7850-2	T-Handle Lock & Key	1
3	K7850-3	Gas Struts (x1)	2
4	K7850-4	Roll Cage Bolt Pack (x10)	2

ITEM	PART NO.	DESCRIPTION	QUANTITY
5	K7850-5	Ball Bearing Slides (Pair)	6
6	K7850-6	Tie Down Anchor	2
7	K7850-7	EVA Mat Pack (x7)	1
8	K7850-8	Rubber Lid Seal	1